
Cable Comb

Screws to the back edge of a desk and holds five charging cables where you can reach them.

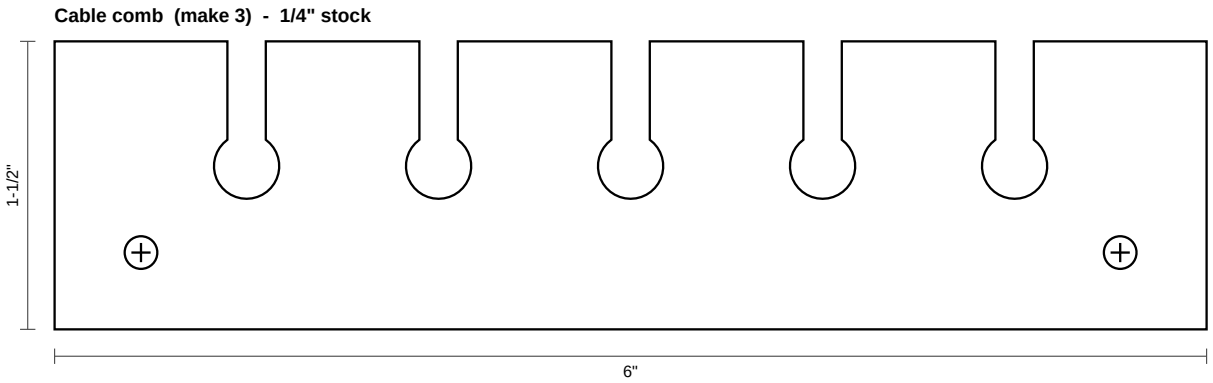

Machine & stock

Laserbox 40W CO2, cut only.

The 0.2" neck opens into a 0.34" hole: cables from about 1/8" to 5/16" thick snap in and stay put.

Hardware

Two #8 x 3/4" screws per comb.

Steps

1. Cut three combs (one sheet).

2. Countersink the two screw holes by hand.

3. Screw the comb to the back edge of the desk, slots up, and press each cable through a neck.

Files

dxf/cable-comb.dxf, svg/cable-comb.svg

Plan view, drawn at about 1:1. Grey = pocket (depth noted), dashed = underside pocket, light fill = through cut. Cut files are full size.